



DELCO E82 IROM MPC5676 BAM GM

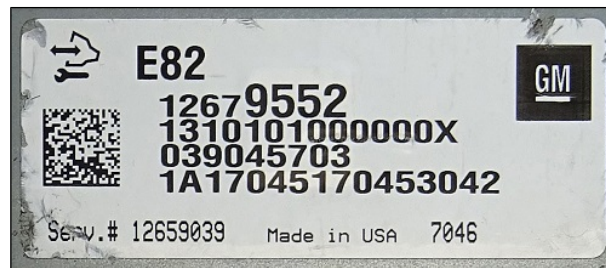

Open the side of the ECU that does not have connectors:

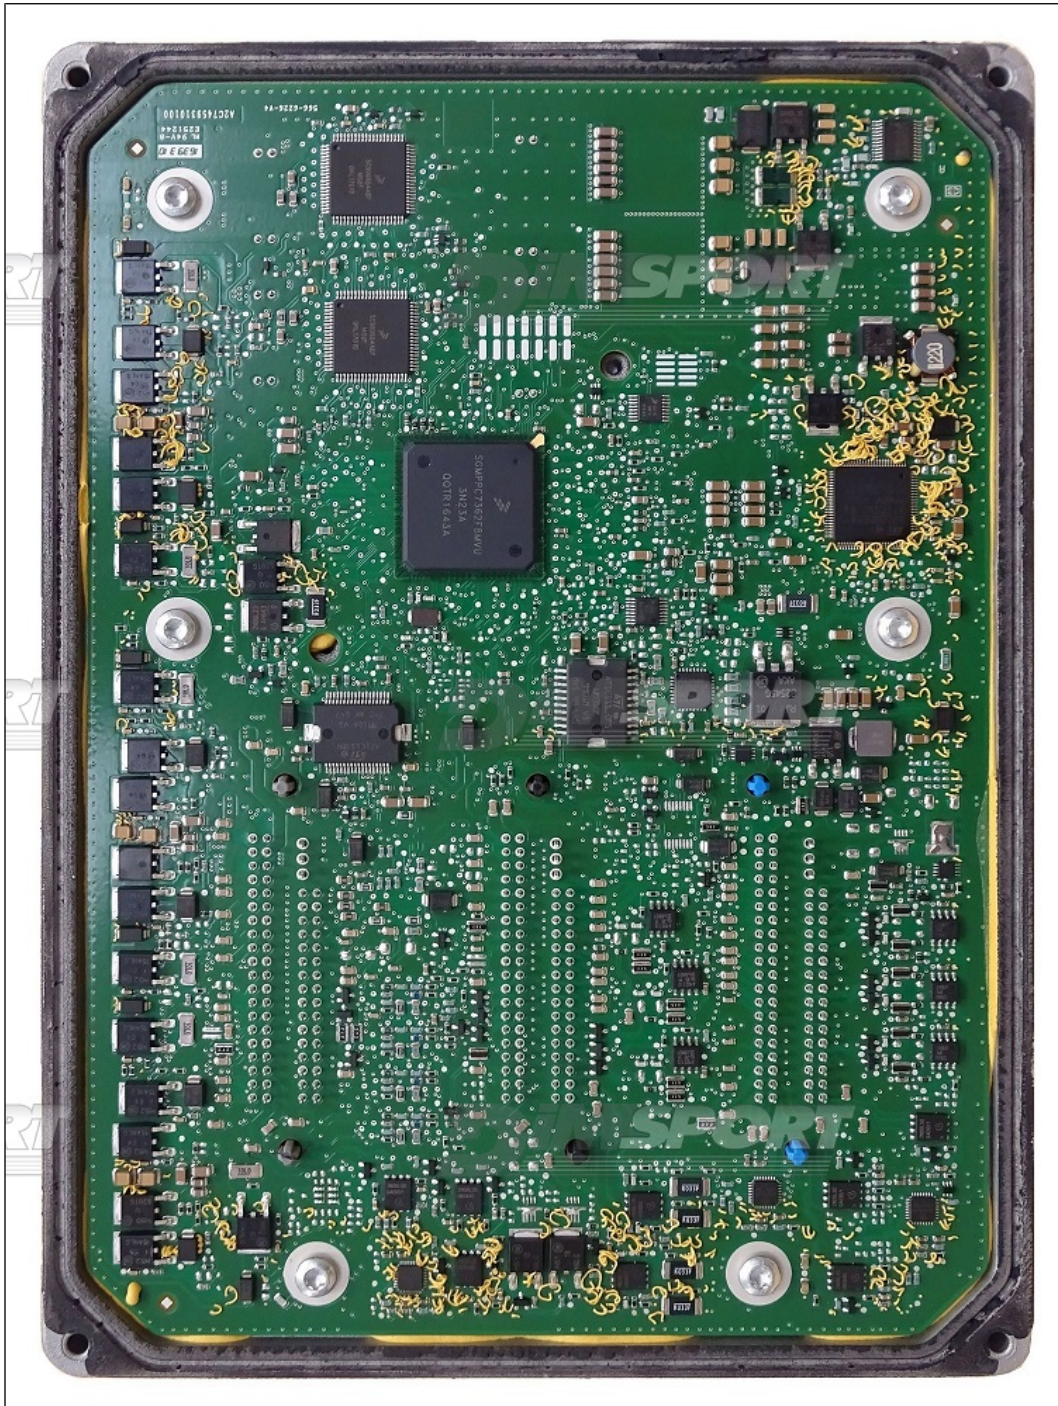

1.2 CONNECTIONS

1.2.1 BOOT/CNF1 DIRECT CONNECTION




ATTENTION

After making all the connections, connect a stabilized power supply to the New Trasdata and make sure that the POWER LED (red) is on.

To communicate correctly with the control unit, it is necessary to use the F32GN037C/D cable.



WIRE COLOUR		DESCRIPTION
Red	Red	+12 V
Black	Black	GND
Green	Green	CAN L
White	White	CAN H
Blue	Blue	CNF1

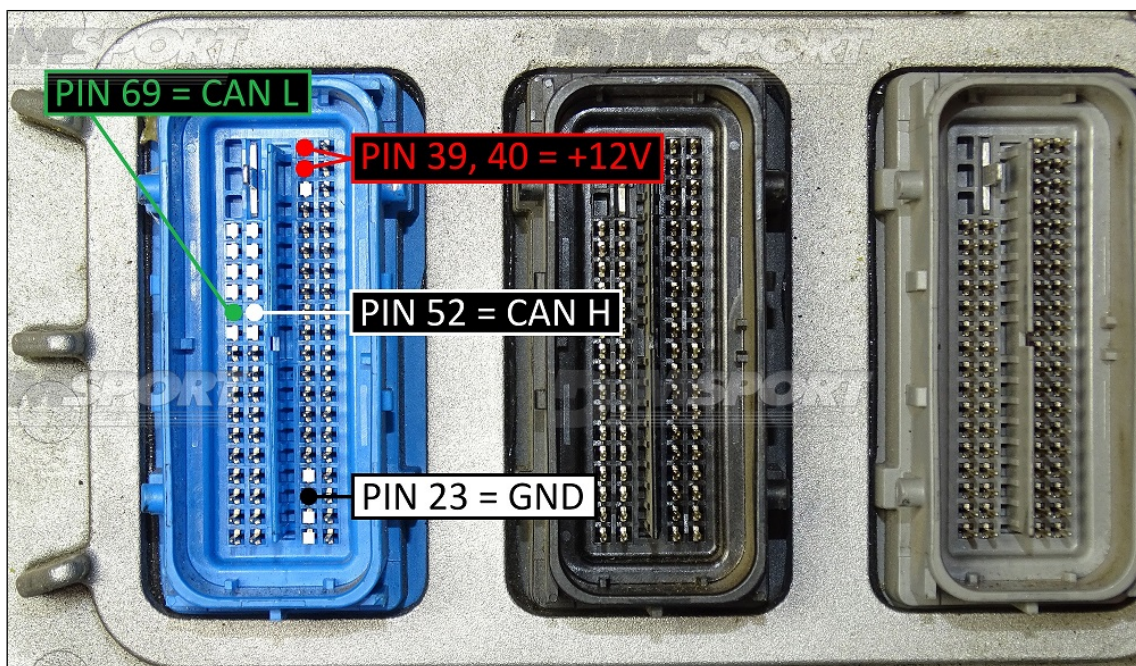

Connect the CNF1 pin to the blue wire of the cable F32GN037C/D .



Once all the connections have been made, it will be possible to communicate with the ECU by entering the password in the appropriate dialog box that will appear during the ID.

