
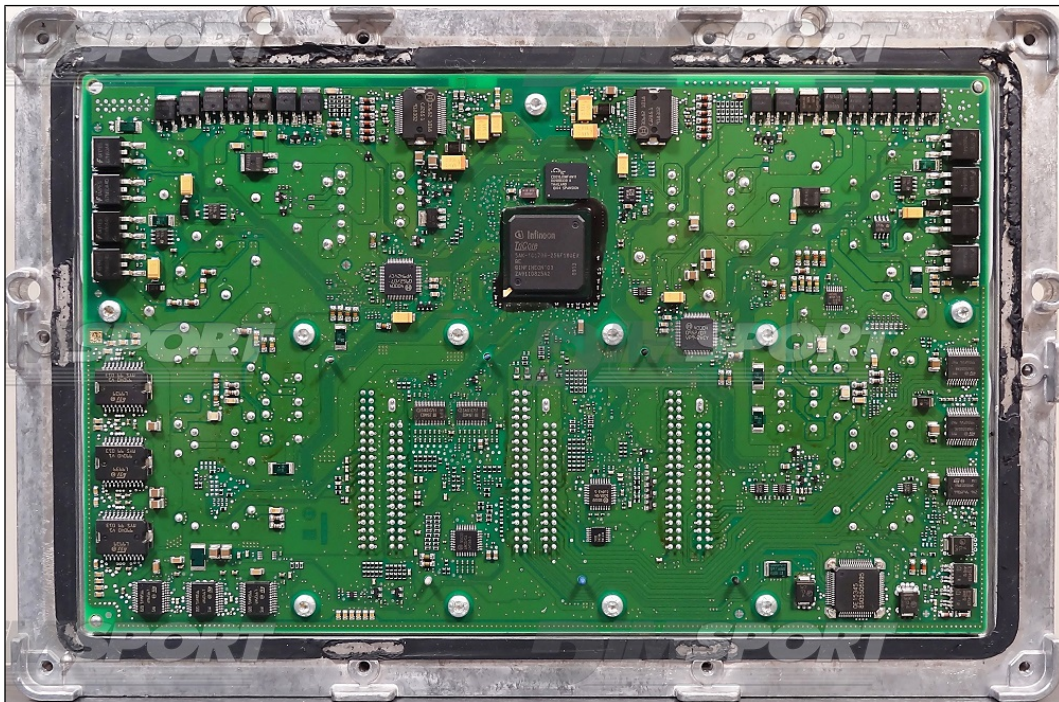


1 BOSCH E86A XROM TC1796 CHEVROLET/GMC

1.1 PLUGIN 0394

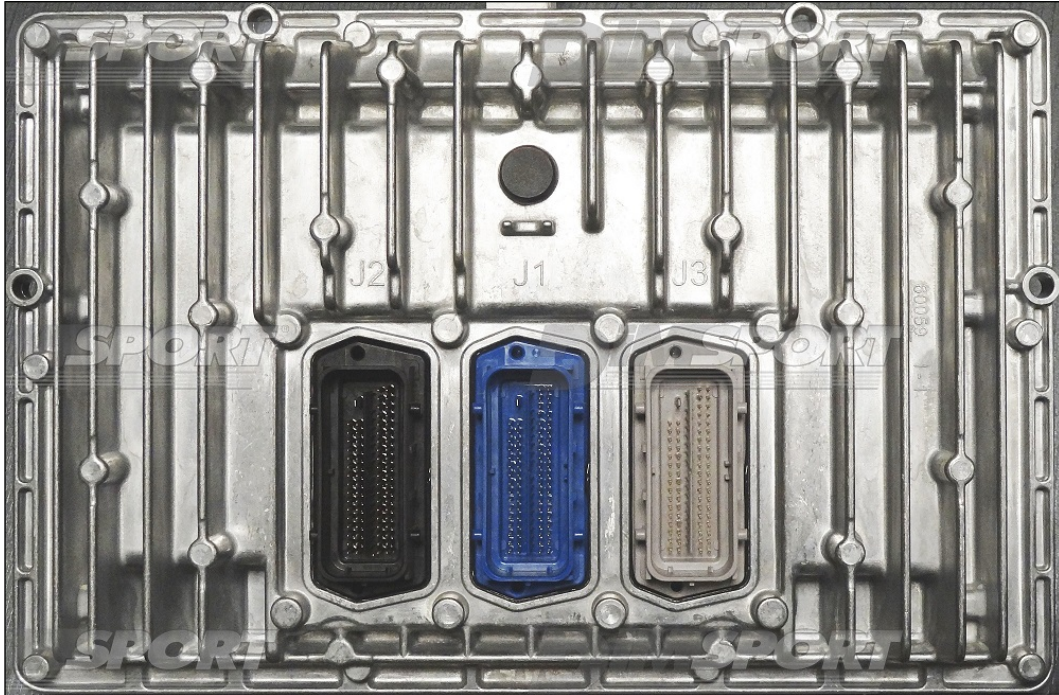

1.2 CONNECTIONS

1.2.1 DIRECT CONNECTION




ATTENTION

After making all the connections, connect a stabilized power supply to the New Trasdata and make sure that the POWER LED (red) is on.

To communicate correctly with the control unit, it is necessary to use the F32GN037C/D cable.



WIRE COLOUR		DESCRIPTION
Red	Red	+12 V
Black	Black	GND
Green	Green	CAN L
White	White	CAN H
Grey	Grey	BOOT

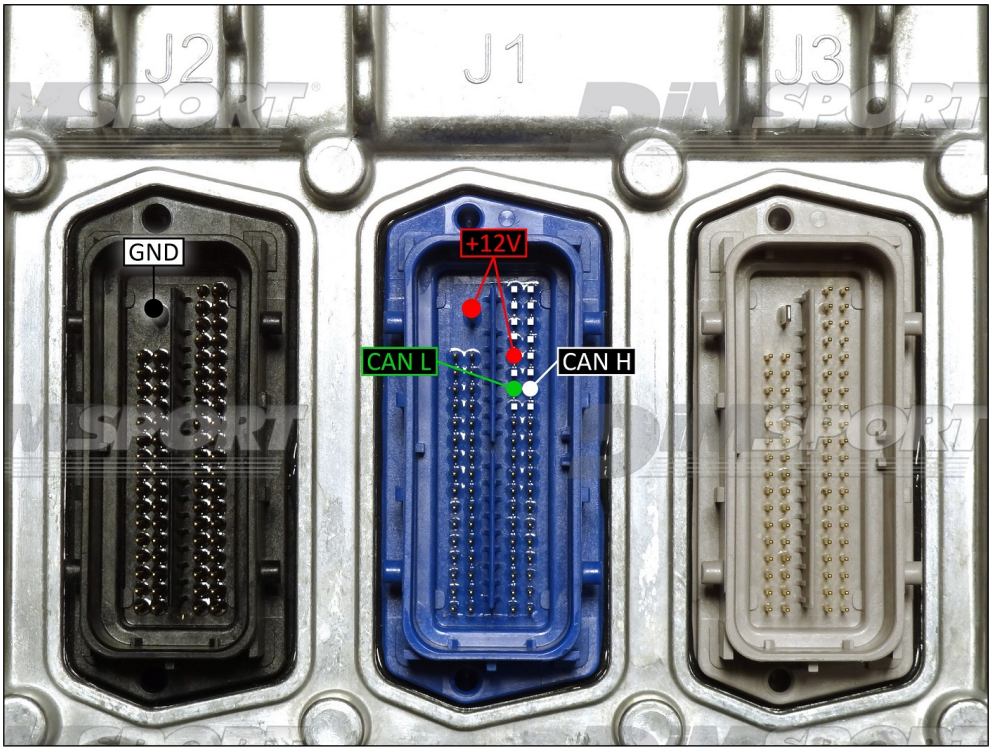

Connect the BOOT pin to the grey wire of the cable F32GN037C/D .

