



1 DELCO E92 IROM MPC5674 BAM GM

1.1 PLUGIN 1836

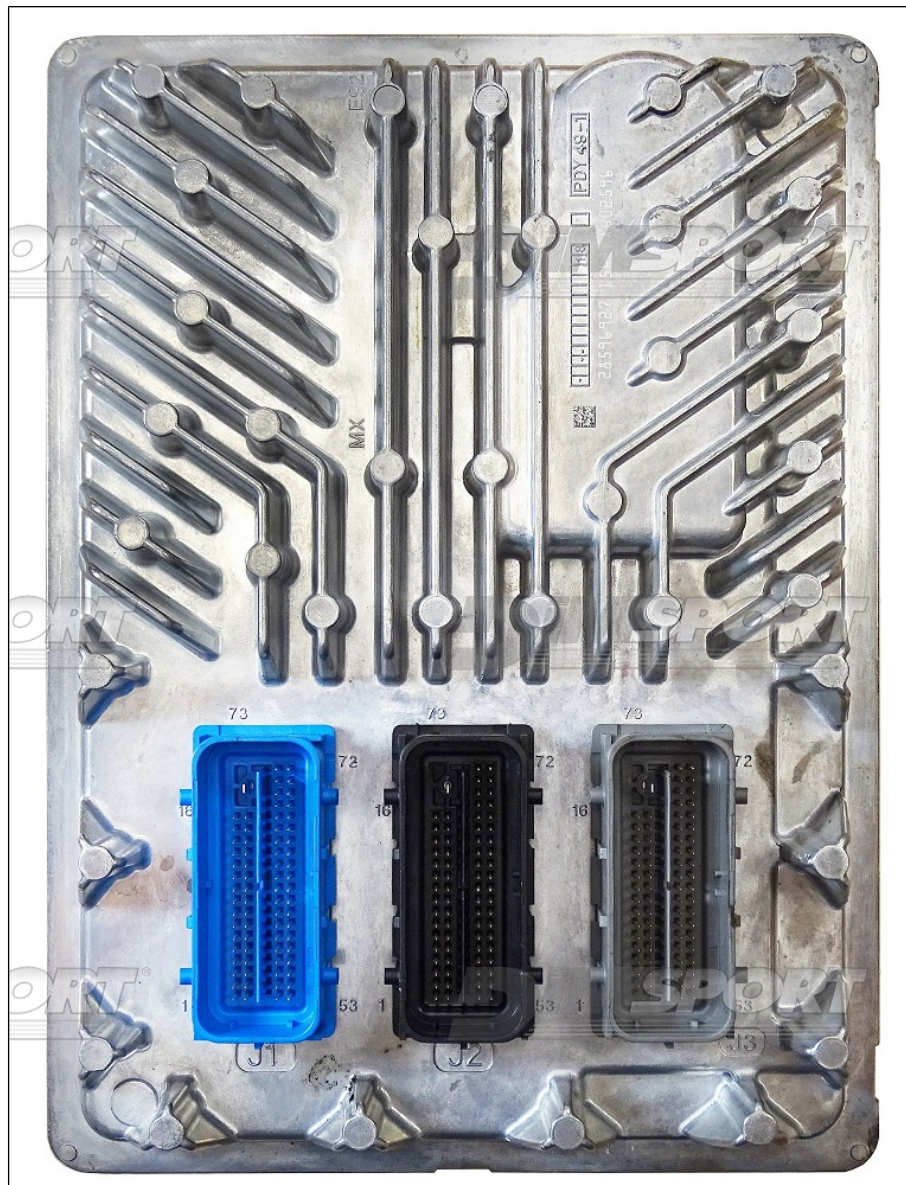

Open the side of the ECU that does not have connectors:

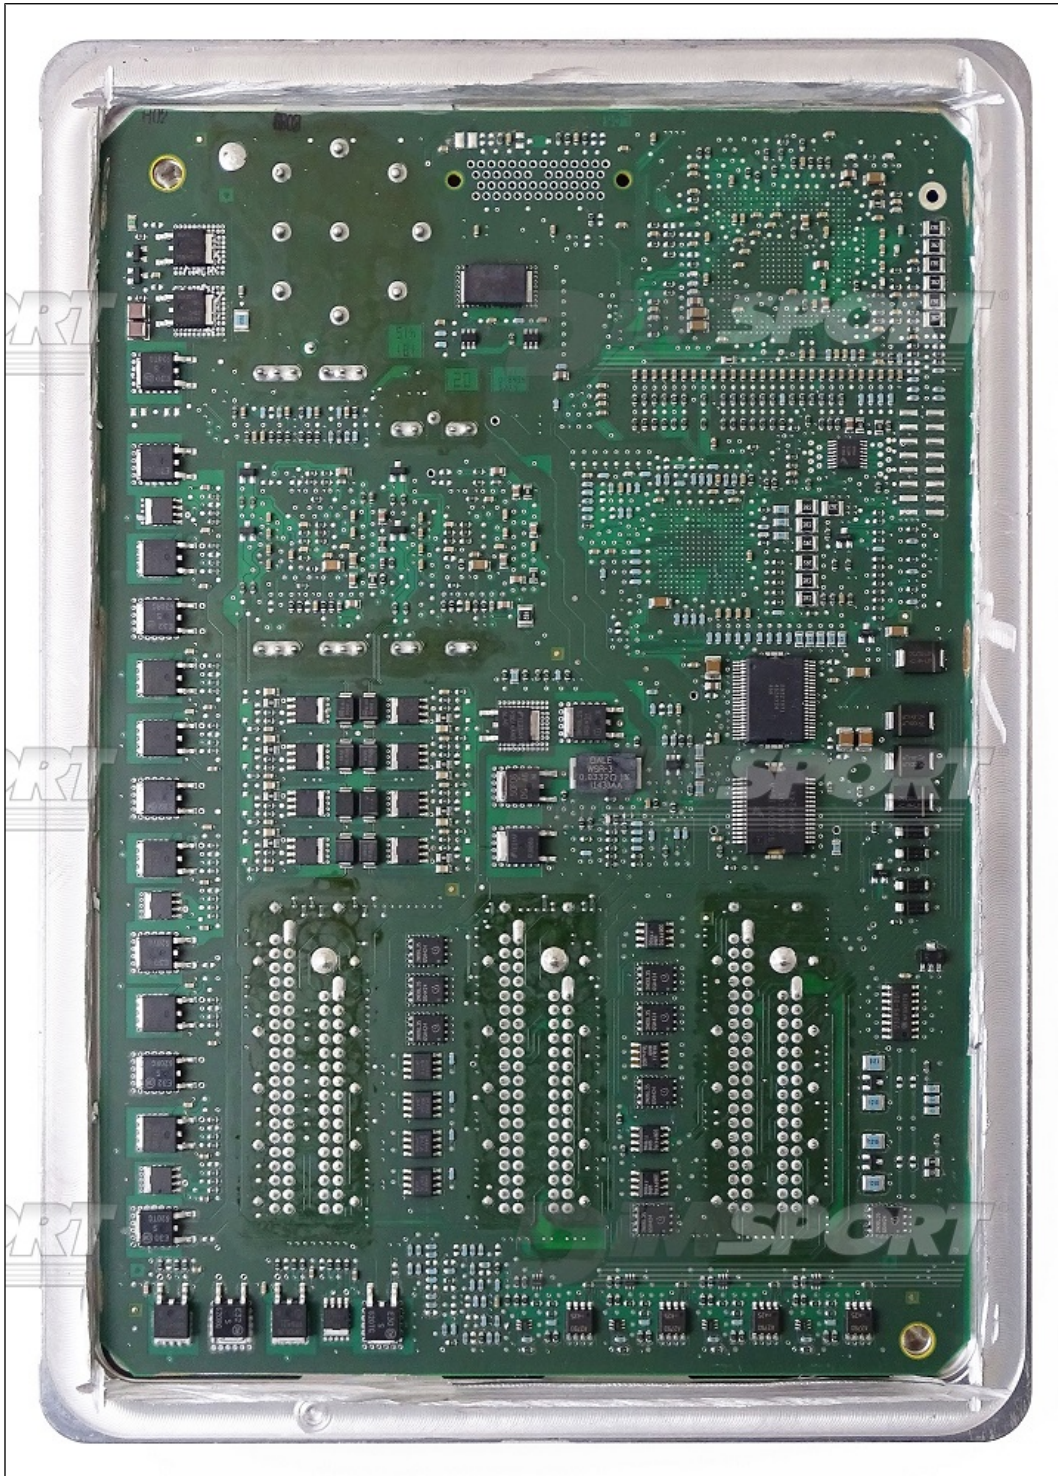

1.2 CONNECTIONS

1.2.1 DIRECT CONNECTION




ATTENTION

After making all the connections, connect a stabilized power supply to the New Trasdata and make sure that the POWER LED (red) is on.

To communicate correctly with the control unit, it is necessary to use the F32GN037C/D cable.



WIRE COLOUR		DESCRIPTION
Red	Red	+12 V
Black	Black	GND
Green	Green	CAN L
White	White	CAN H
Grey	Grey	BOOT
Blue	Blue	CNF1

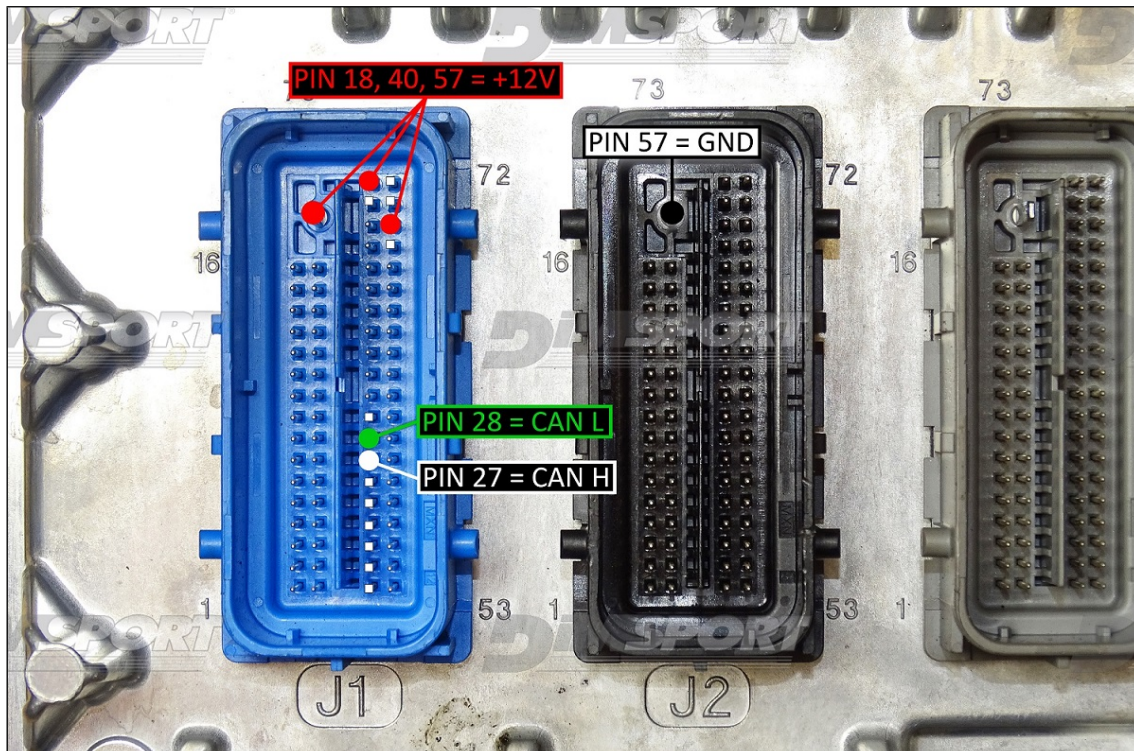



ATTENTION

*In order to operate on the ECU it is necessary to perform the LINK jumper.
Remove the LINK jumper before reinstalling the ECU back into the vehicle.*

Connect the BOOT and CNF1 pins to the grey and blue wires of the cable F32GN037C/D .

