


1 BOSCH DCU15 C167 VOLVO

1.1 PLUGIN 1921

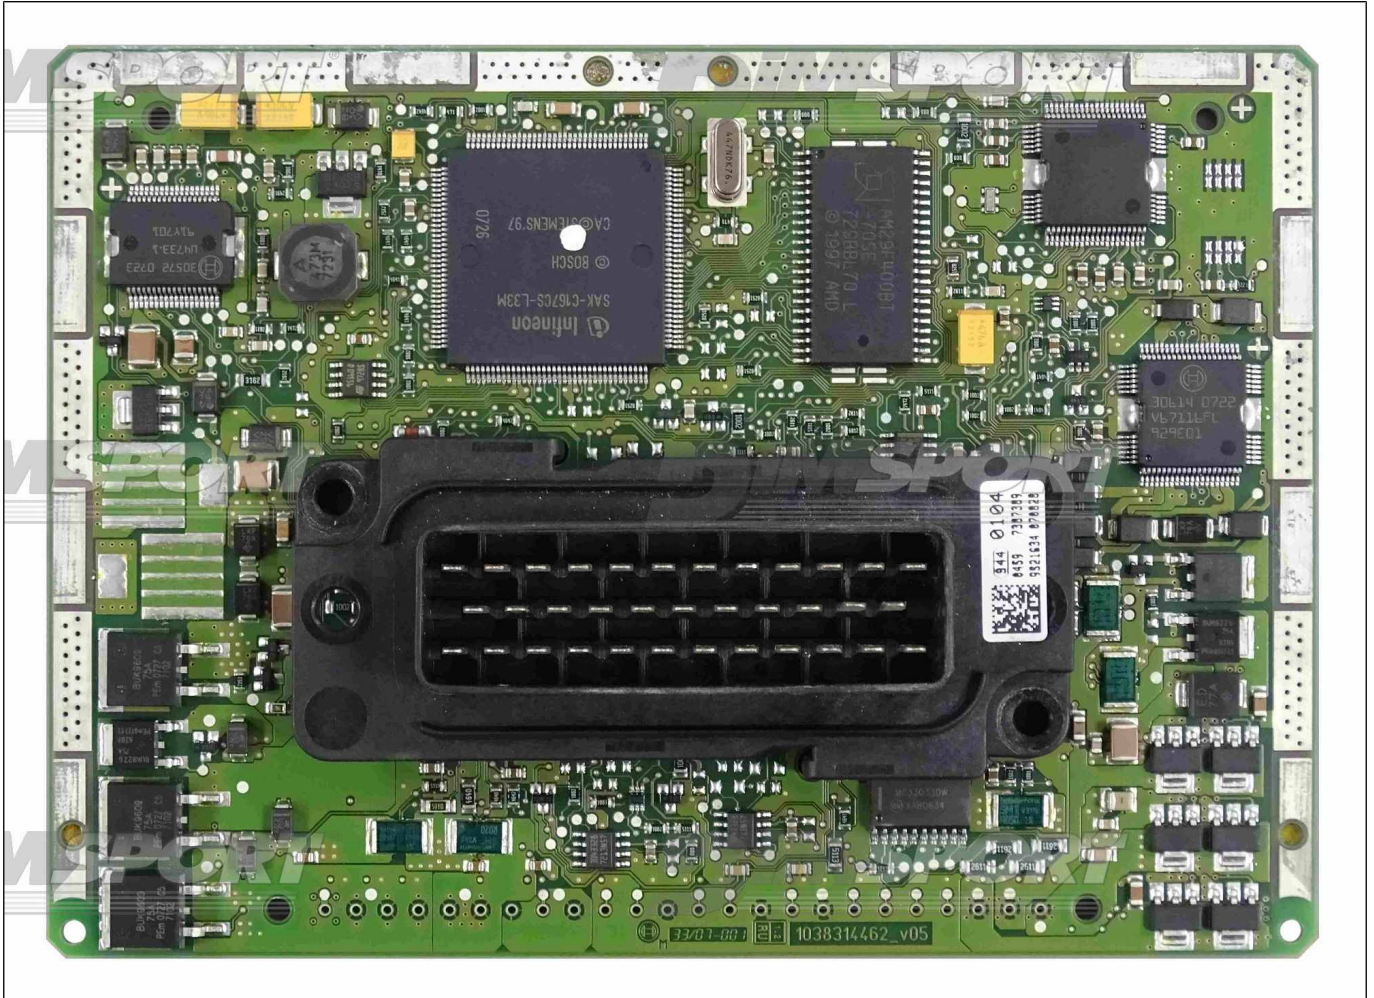

1.2 CONNECTIONS

1.2.1 DIRECT CONNECTION




ATTENTION

After making all the connections, connect a stabilized power supply to the New Trasdata and make sure that the POWER LED (red) is on.


To communicate correctly with the control unit, it is necessary to use the F32GN037C/D and F34NTF53 cables.



WIRE COLOUR		DESCRIPTION
Red	Red	+12 V
Black	Black	GND
Grey	Grey	BOOT

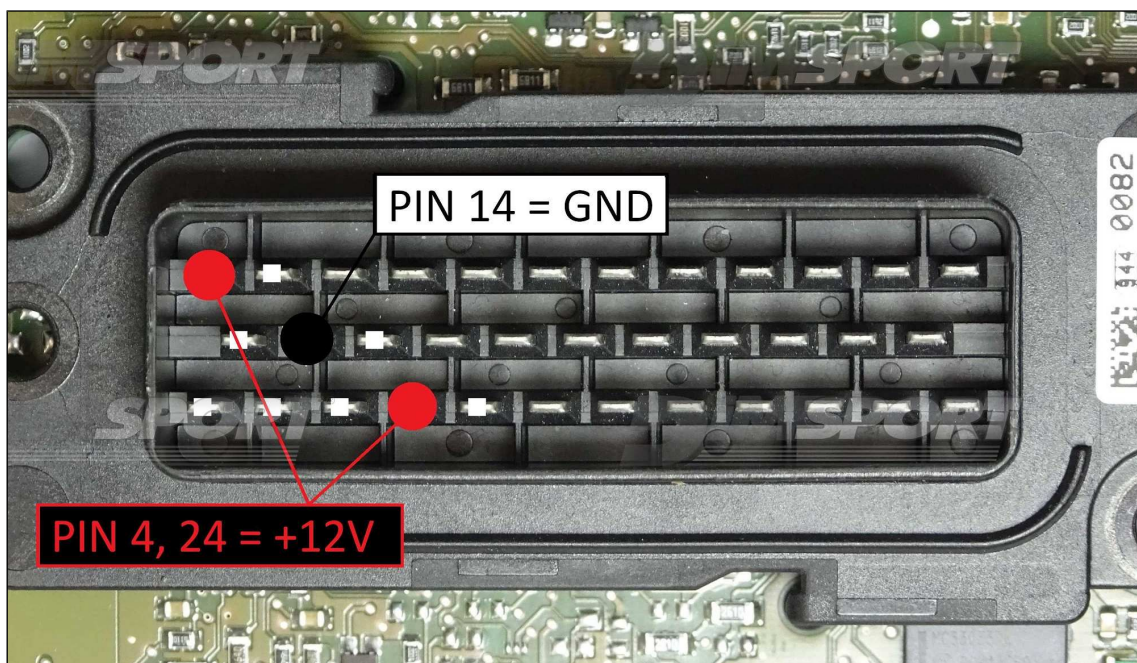

To enable the read or write operations it is necessary to remove the resistor 0 indicated in the picture.
Once the work is completed, it's necessary to re-solder the resistor.

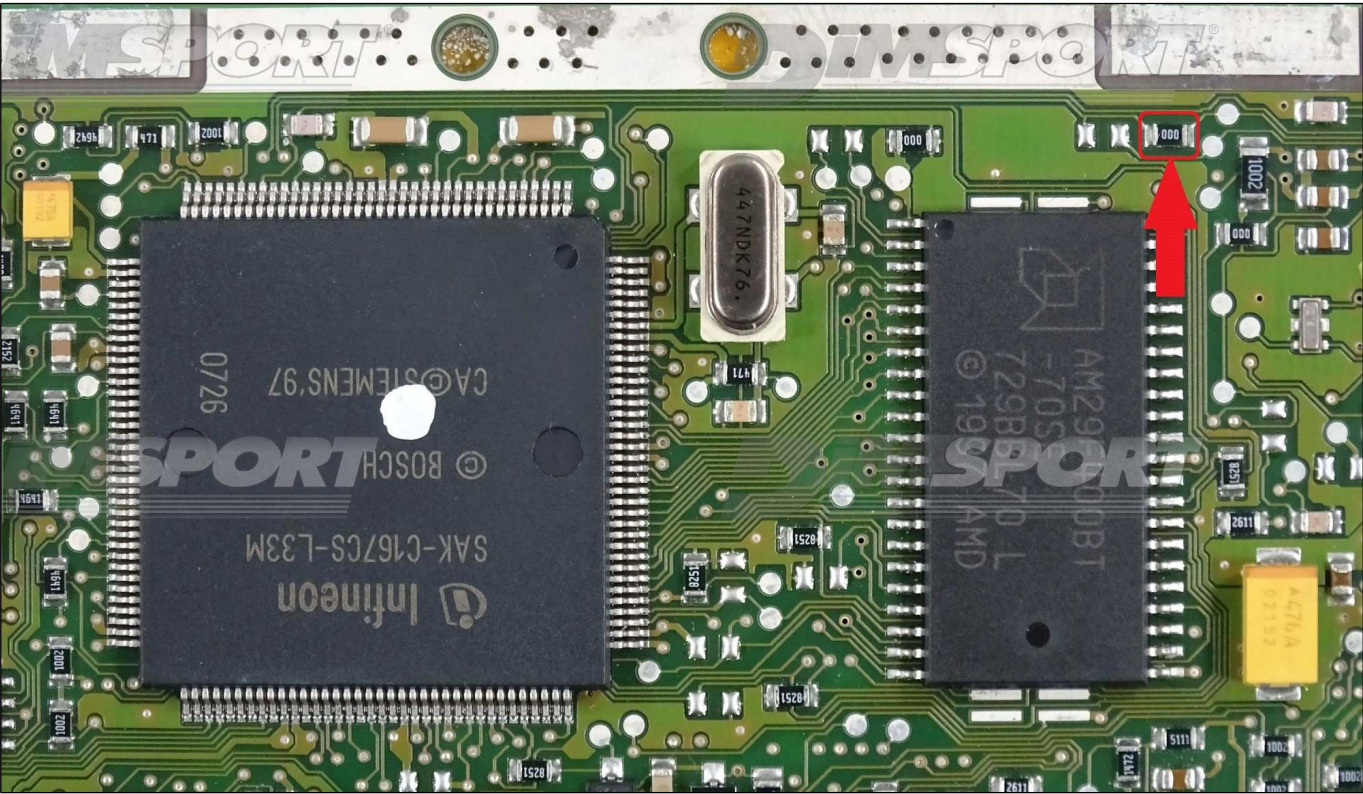

For the RX&TX connections, it is necessary to use the F34NTF53 FLAT cable.



PIN	WIRE COLOUR
19	WHITE
20	BLACK

Connect the BOOT pin to the grey wire of the cable F32GN037C/D .

