
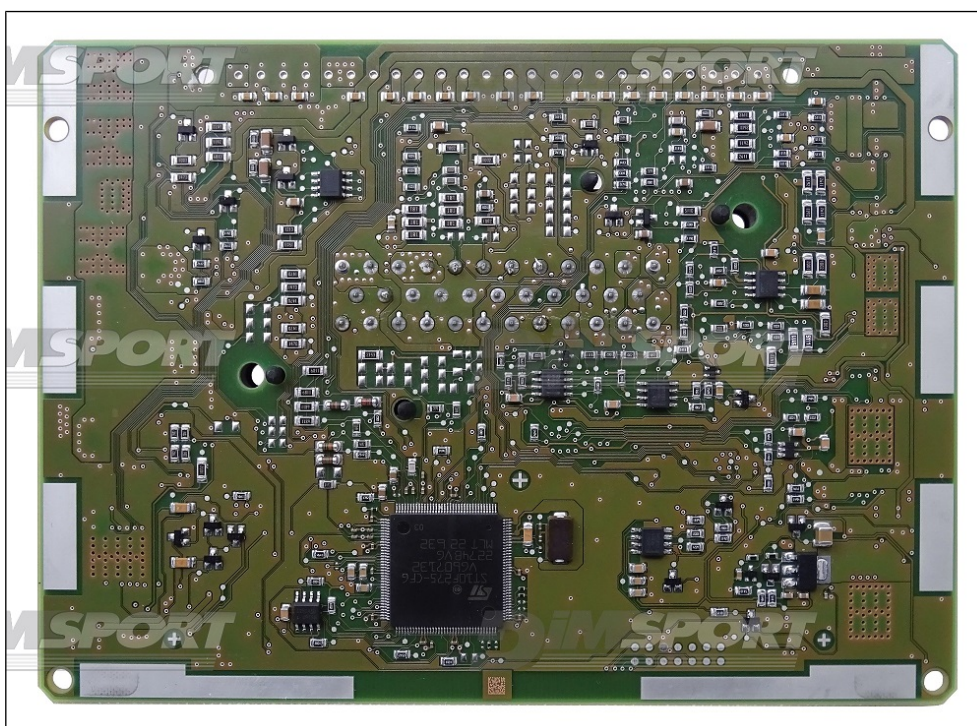


1 BOSCH DCU15 IVECO/VOLVO

1.1 PLUGIN 0915

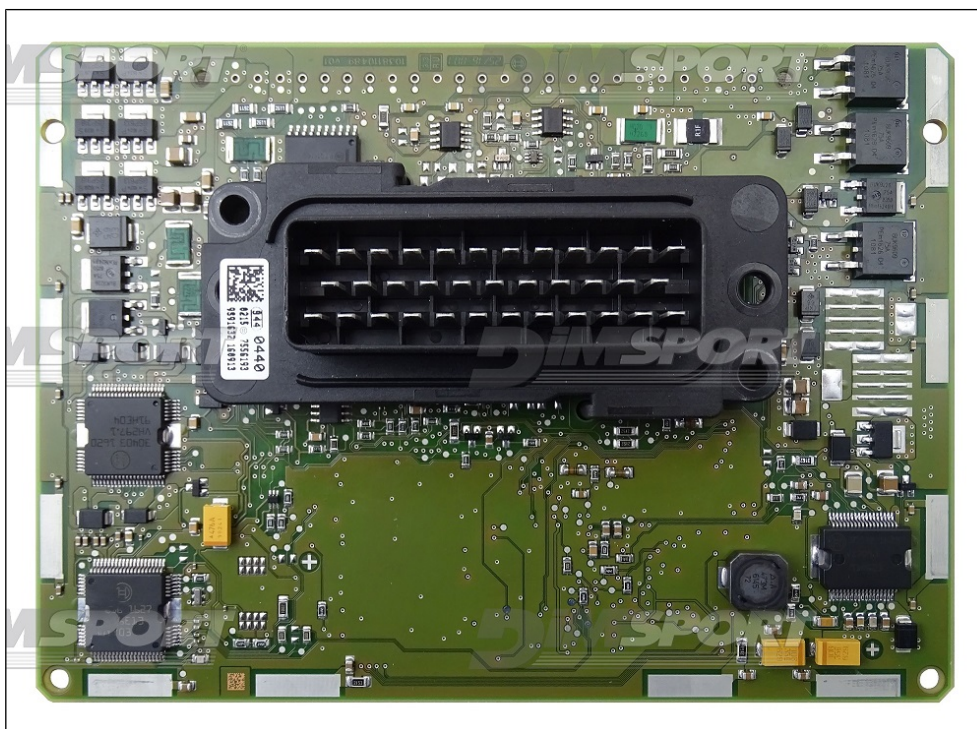

1.2 CONNECTIONS

1.2.1 DIRECT CONNECTION





ATTENTION

*After making all the connections, connect a stabilized power supply to the New Trasdata and make sure that the **POWER LED** (red) is on.*

To communicate correctly with the control unit, it is necessary to use the F32GN037C/D cable.




WIRE COLOUR		DESCRIPTION
	Red	+12 V
	Black	GND
	Grey	BOOT
	Blue	CNF1

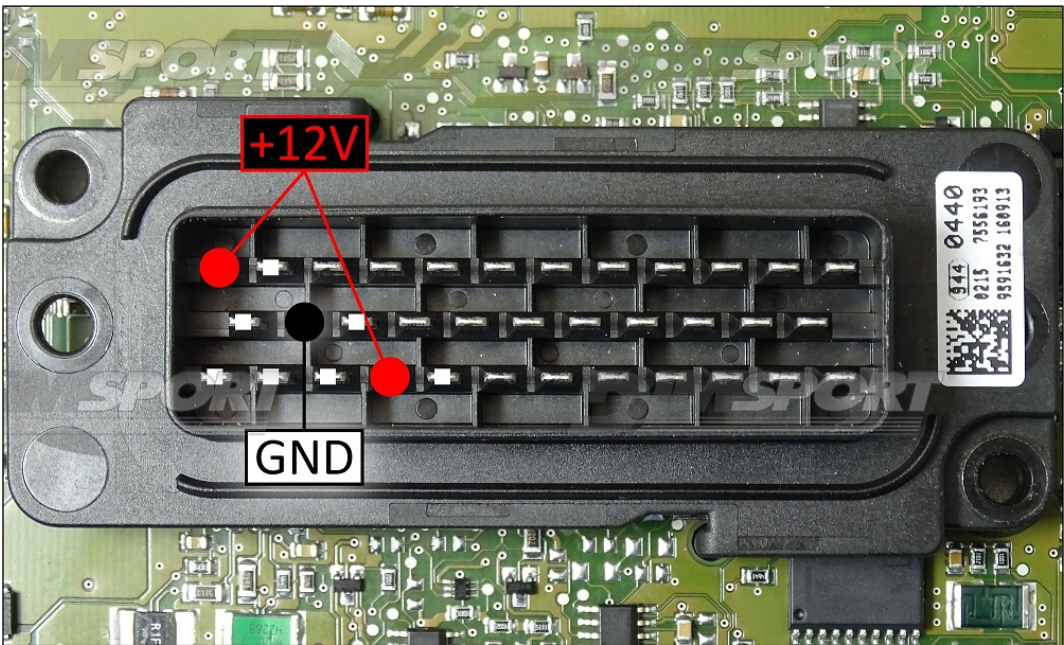



ATTENTION

In order to communicate correctly with the ECU it is necessary to lift the pin indicated in the following image.
Reconnect the pin before reinstalling the ECU on the vehicle.

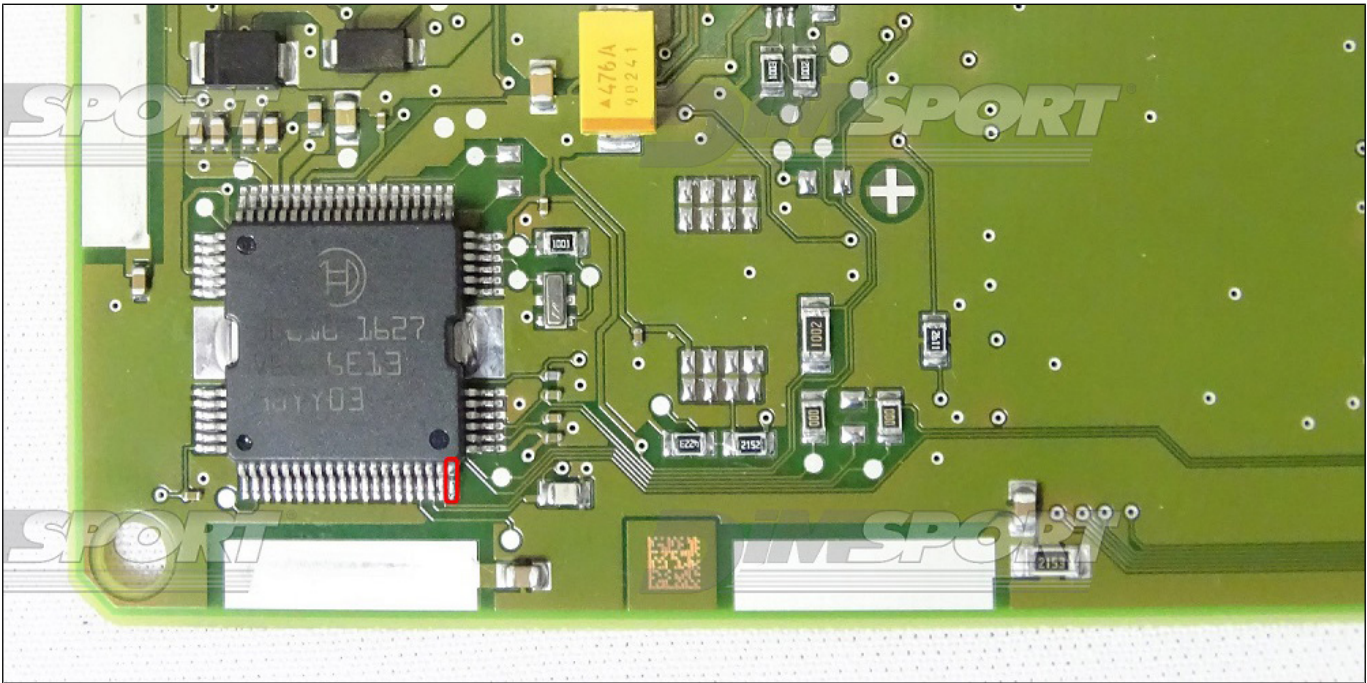


For the RX&TX connections, it is necessary to use the F34NTF53 FLAT cable.

➔ **DIGITAL PORT**

F34NTF53



PIN	WIRE COLOUR
19	WHITE
20	BLACK

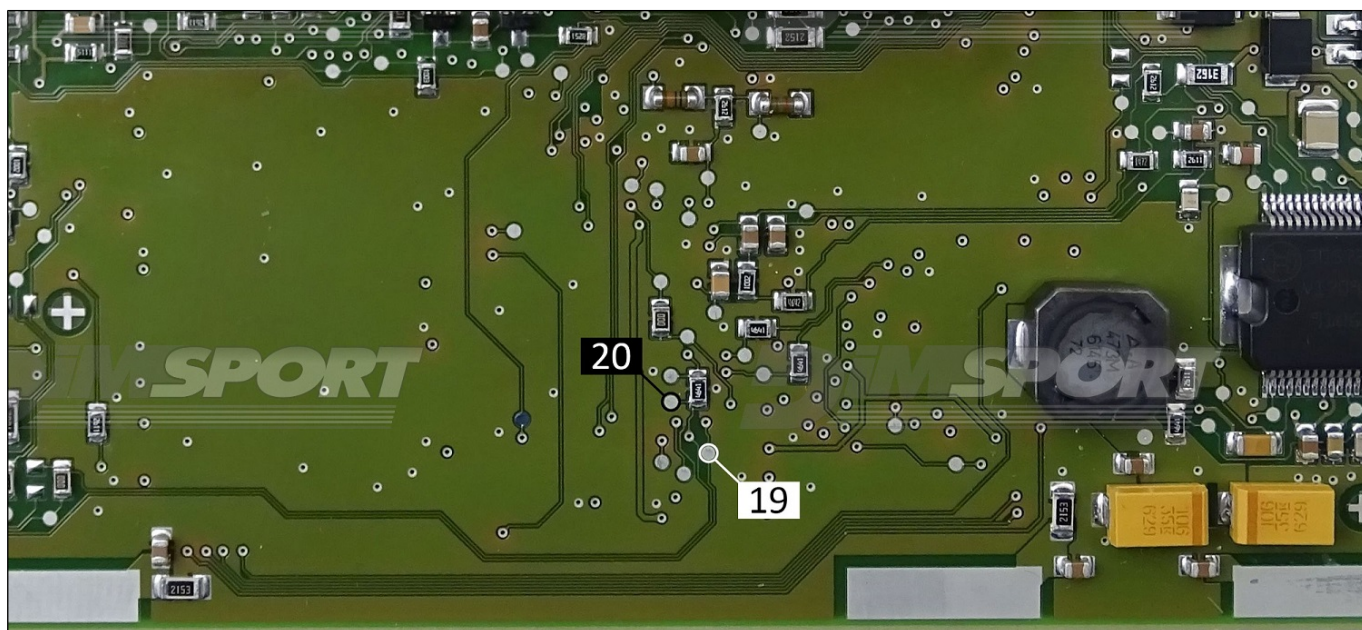

Connect the BOOT and CNF1 pins to the grey and blue wires of the cable F32GN037C/D .

